



BRISKAIR

Auto Air Conditioning Specialists

ECOWIND - Refrigerated Cooling System Operating Manual



KEYPAD FUNCTIONS

1. Fan Switch, Regulate Fan Speed.
2. Thermostat (To set desired Temperature).
3. Yellow LED, Glow Plug Status.
4. Two Coloured LED, (Red / Green Mtr Status)
Red- Mtr OFF **Green**- Mtr ON
5. Orange LED (Heat Status) *Not Applicable*.
6. Blue LED (A/C ON)
7. LCD (Hr Meter) Service reqd at 500hr Intervals.
8. A/C Switch – = ON, **O** = Off.
9. Start = Motor Activation. (Prior to activation wait 10 sec for glow plug status.) Release when Mtr Status LED (4) Changes From **Red** To **Green**.
10. Power Mains Switch (= Power ON, **O** Power OFF & = Battery Smart sensor activated.)

TO TURN ON ECOWIND

1. Press Power button up to =.
2. Wait 10 Seconds.
3. Press start Button down to = & Hold, to hear Engine start.
4. Wait 5 Seconds.
5. Press A/C Button up to – (Blue Light will come on)
6. Turn Temp control to ½ way Approx.
7. Most efficient speed to run is 2.

TO TURN OFF ECOWIND

1. Press A/C OFF (O) Blue light off.
2. Turn off Fan Switch.
3. Press Power button to Centre (O).
4. Hear Engine switch Off.

Engine Smart Battery Sense

- Note: Make sure A/C Mode is **OFF**. (**O**)

1. Press Power Button down to REC BATT =.
2. Red LED (4) will come on to Indicate Rec Batt Mode activated.
3. On sense of voltage drop, Engine will activate to Charge vehicle.