BRISKAIR

Auto Air Conditioning Specialists

ECOWIND®

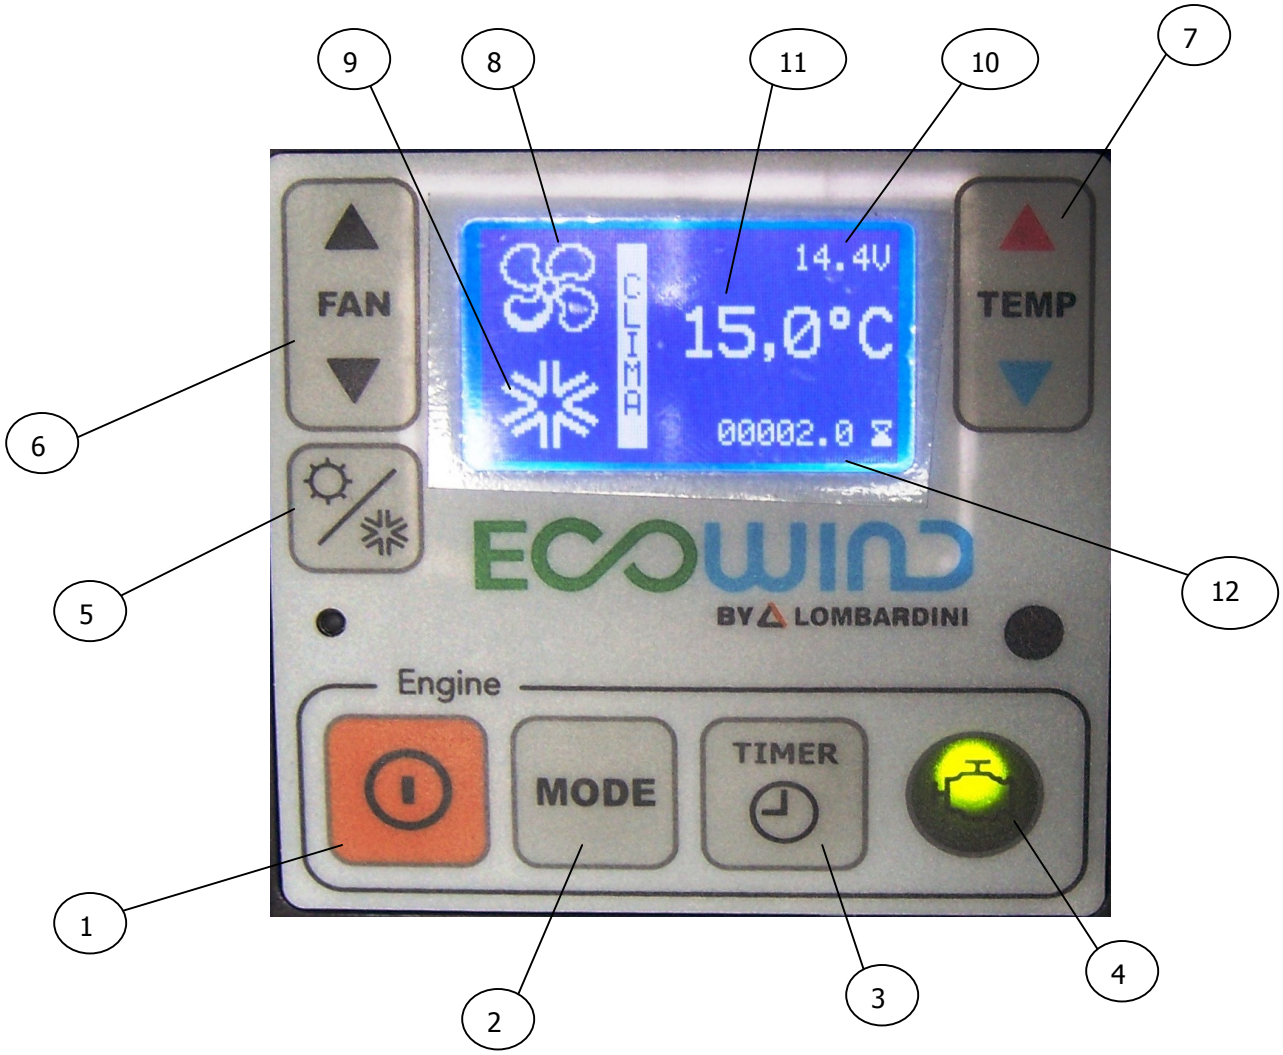

1. Power on Button
2. Mode switch – switched between a/c and recharge mode
3. Timer Switch
4. Engine Light – Shows engine running
5. A/C / Fan switch selects between a/c and fan mode
6. Fan level / Speed switch – 8 speeds
7. Temp selector switch
8. Fan speed indicator
9. A/C / Fan mode symbol either snow flake or fan
10. Battery Voltage
11. Temperature selected
12. Hour Meter

BRISKAIR

Auto Air Conditioning Specialists

ECOWIND®

Fan mode engine not running

Battery Voltage

A/C mode engine running

Charging Voltage

BRISKAIR

Auto Air Conditioning Specialists

ECOWIND®

To Start Ecowind push power on button (1)

The display will light up and either a/c or fan symbol will be shown (9)

In the fan only mode – engine will not start but fan speeds can be changed (9)

Press a/c fan mode button (5) Snowflake symbol will be displayed

After 5-10 seconds engine will start and fan symbol will begin to flash (8)

Engine Light will turn on (4)

Fan symbol (8) will stop flashing and a/c compressor will engage after 10 seconds

Fan speed can now be changed with fan switch (6)

To adjust inside temperature use temp up and down (7)

To switch the unit off push power on button (1)

<u>Recharge mode</u> - To select recharge mode

Push power on button (1)

Push mode button (2)

The display will change to recharge mode and battery voltage will be indicated

Note; Engine will start automatically when the battery voltage drops to 12v

To cancel recharge mode press power on button (1)